

A split air conditioning unit has a wall-mounted unit on the inside of a house and an outdoor unit to take in air and cool it. The indoor unit only dispenses the air, so it runs quietly.

A Mitsubishi split A/C unit needs cleaning in order to remain in working condition, like other such units. Filter cleaning is the largest consideration for the unit.

Step 1

Remove the front panel of the indoor Mitsubishi split air conditioning unit. Wet a cloth and wipe off the panel to remove any dust or dirt buildup on it.

Step 2

Remove the air filter from the unit by pulling on the small handle. Vacuum the filter with a brush attachment to remove any surface dust. Soak the filter in a solution of 1 teaspoon mild detergent and warm water for 10 to 15 minutes. Rinse it with clean water until the filter runs clean. Allow it to air dry in the shade before you place it back into the unit.

Step 3

Remove the air cleaning filter. Soak the filter in a solution of 2 teaspoons mild detergent with warm water for 15 minutes. Rinse the air cleaning filter with clean water. Allow it to air dry in the shade before you place it back into the split unit.

Step 4

Replace the front panel.



Here's how you clean the air filters in your ductless mini-split heat pump or air conditioner:

- Open the front panel and lock it into place in the open position
- Remove the blue plastic air filter elements
- Remove the smaller allergen filters so you can clean them separately
- Clean both filter elements with water and a mild detergent
- Dry and replace the air filters
- Close and lock the cover by pressing down on the ends and the middle of the cover until you hear it snap back into the locked position.



Reminder: Make sure outside unit's off-season cover has been removed before use

